

**SPECIFICATION SHEET**

**JFW MODEL 50PA-1094-XX**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	0.1-18 GHz
Attenuation Range	0-31 dB in 1 dB steps
Configuration	Individually controlled solid-state programmable attenuators. Number of attenuators can be selected from 1 to 16 attenuators.
Enclosure Type	19 inch rack mount at 2RU high
Impedance	50 Ohms nominal
Startup/Default States (configurable)	Attenuators to 31dB at startup (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)  All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	2.2:1 maximum < 1.7:1 typical
Attenuation Accuracy (Referenced to Insertion loss)	± 0.50 dB 1-8 dB ± 1.00 dB 9-16 dB ± 1.25 dB 17-31 dB
Insertion Loss	7.5 dB maximum 2.0 dB typical @ 0.1 GHz 3.2 dB typical @ 3 GHz 4.0 dB typical @ 6 GHz 5.5 dB typical @ 12.4 GHz 6.6 dB typical @ 18 GHz
RF Input Power	+20 dBm average +25 dBm (0.1dB compression) Warning: DC voltage not allowed on RF connections
Switching Speed	1 microsecond typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 50PA-1094-XX**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA female

Operating Temperature Range

0°C to +50°C

AC Supply

100-240 VAC @ 47-63 Hz

Physical Size

See Outline Drawing 092-9082



ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	05/17/2018		CLK 05/17/2018				
29166	11/16/2018	A	TRS 11/16/2018				