#### SPECIFICATION SHEET

#### JFW MODEL 50PA-846

(configurable)

### PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 200-6000 MHz

Configuration 24 individually controlled solid-state

programmable attenuators

Enclosure Type 19 inch rack mount

(4RU high for SMA female) (5RU high for N female)

Impedance 50 Ohms nominal

Attenuation Range 0-63 dB in 1 dB steps

Startup/Default States Maximum attenuation (see ATTEN command)

DHCP enabled (see NET command)
4 Ethernet users (see NET command)
Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12

Ethernet users.

VSWR 1.8:1 maximum 200-800 MHz 1.6:1 maximum 800-6000 MHz

1.0:1 maximum 800-8000 MH2

Attenuation Accuracy  $\pm$  0.50 dB 1-3 dB (guaranteed monotonic)  $\pm$  0.75 dB 4-7 dB

Insertion Loss 6.6 dB maximum

2.7 dB typical @ 200 MHz 3.0 dB typical @ 700 MHz 3.7 dB typical @ 2000 MHz 6.3 dB typical @ 6000 MHz

RF Input Power +27 dBm average

+33 dBm (no damage)

Switching Speed 3 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

# -- CONTINUED --

Page 1 of 2 JFW FORM E-7-F REV F

# SPECIFICATION SHEET

# JFW MODEL 50PA-846

# PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

Remote Commands Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable

Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users,

Reboot, Uptime, Prompt

AC Supply 100-240 VAC @ 47-63 Hz

2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse#215-002, JFW#025-021

RF Connector N or SMA female

Operating Temperature Range 0°C to +50°C

Outline Drawing Numbers 092-7621 (50PA-846 N)

092-7899 (50PA-846 SMA)

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN	# DATE	REV	APPR / DATE
	12/13/2013		TRS 12/13/2013	29172	11/20/2018	С	CLK 11/20/2018
24239	06/27/2014	A	TRS 06/27/2014				
25773	09/24/2015	В	TRS 09/24/2015				

Page 2 of 2 JFW FORM E-7-F REV F