

SPECIFICATION SHEET
JFW MODEL 50PA-912
HANDOVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	2-6 GHz
Configuration	8 X 8 Handover Test System (See block diagram 092-6869) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 9RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Maximum attenuation (see ATTEN STARTUP command) DHCP enabled (see NET command) 4 Ethernet users (see NET USERS command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.6:1 maximum
Attenuation Accuracy (guaranteed monotonic)	± 0.50 dB 1-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 4% 12-95 dB (whichever is greater)
Insertion Loss	37 dB maximum 29 dB typical @ 2 GHz 34 dB typical @ 6 GHz
Isolation	53 dB minimum (In 1-8 to In 1-8) 53 dB minimum (Out 1-8 to Out 1-8)
RF Input Power	+30 dBm average
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PA-912
HANDOVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA female

Operating Temperature Range


0°C to +50°C

AC Supply

100-240 VAC @ 47-63 Hz
 2 Amp 5x20mm "Slo-Blo" AC fuse
 Littelfuse#215-002, JFW#025-021

Physical Size

See outline drawing 092-8131

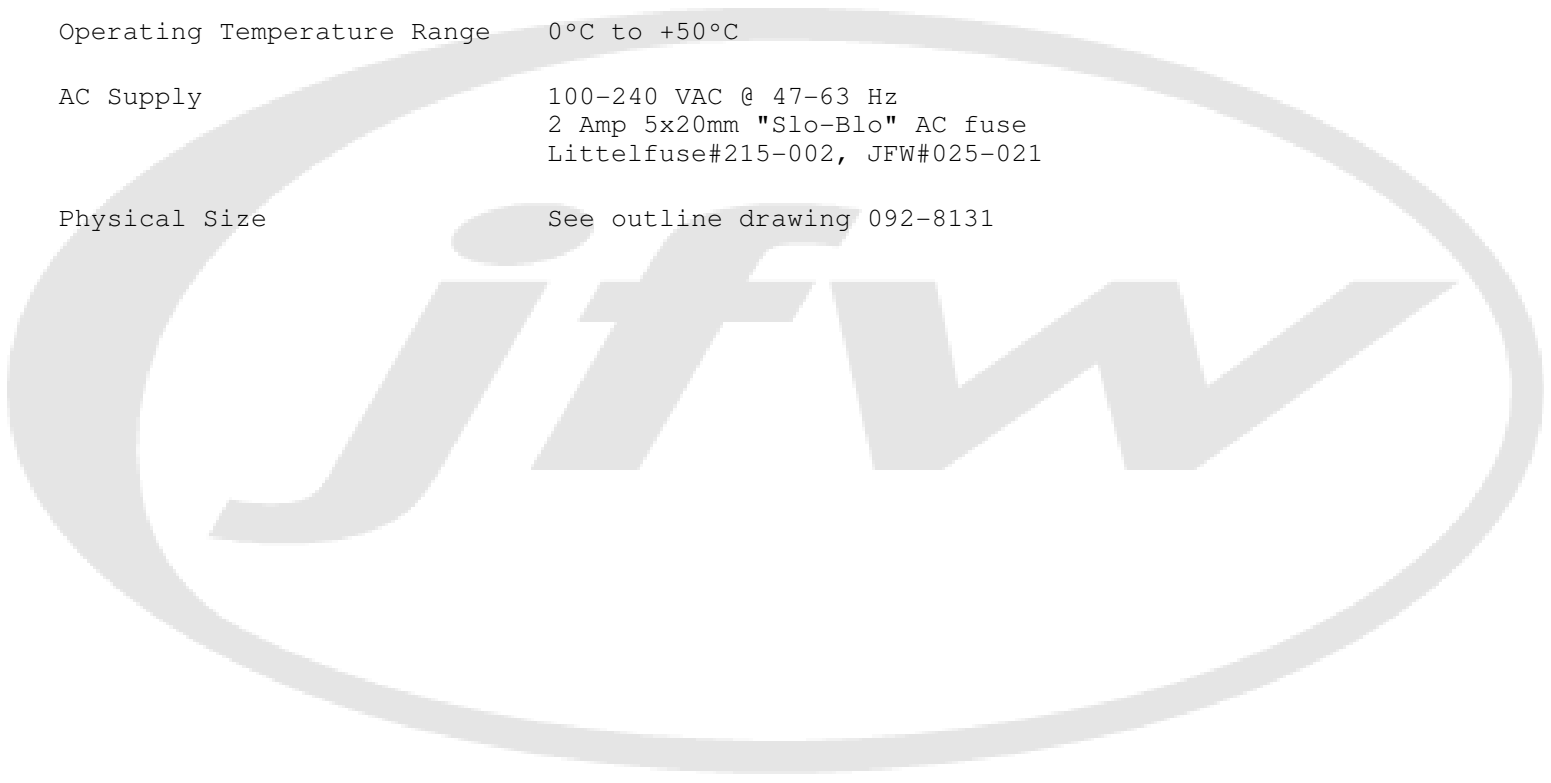

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	10/22/2014		CLK 10/22/2014				
28159	10/05/2017	A	CLK 10/05/2017				